

## Installing the UV Lamp

Switch off the power.

If you are simply changing the lamp, then there is no need to turn the water off as the lamp is enclosed in a glass tube.

Pull the black hood off the stainless tube. The lamp may come out with the hood. If not remove the UV lamp from the quartz tube by hand.

Insert the new UV lamp into the quartz tube through the open-ended nut.

Push the lead from the black ballast unit onto the lamp prongs. Make sure the prongs line up - they are slightly rectangular, not square.

Check that there are no water leaks. Do not power up the ballast until no leaks are found.

If a slight leak is noticed, slowly tighten the nuts at the end of the stainless-steel casing. Do not over tighten.

