

Replacing Filter Cartridges

Switch off the power to the UV unit.

Turn off the water coming in, using the ball valve located on the UV unit.

Relieve any pressure in the system by holding down the red button on top of the filter housing. Alternatively, you can briefly run a tap in the house.

Unscrew the blue filter housings using the spanner provided. There will be water that comes out, so it pays to have a rag and bucket handy.

Pull out the filter cartridges and dispose of appropriately.

Insert the new water cartridges into the blue filter housing. There is a raised bump at the bottom of the housing that the filter sits on.

Check that the rubber o-ring is seated correctly. Screw the filters back on and tighten with the spanners provided, taking care that the threads are not crossed. Do not over tighten.

Open the inlet valve into the UV Unit. There will be some air trapped in the unit and you can release this with the red buttons at the top of the housing, or by running a tap in the house. The water will splutter for a minute or two.

Check for water leaks and tighten up the housings if needed.

Filter Cartridge order

It is important to install the cartridges in the correct order. Working from the water inlet they need to be installed as follows:

1. 20 micron White pre-filter
2. 5 micron White pre-filter
3. 2 micron carbon block filter